

NRG Zone - System Schematic - 38

Taking more advantage of excessive stored solar heating water for central heating purposes

The Flap type NRV between the Expansion Pipe & the Cold Feed The Flap type NRV in the connection pipe between the Expansion Pipe & the Cold Feed pipe will assist to prevent any expanding volume from rising up & over the Expansion outlet above the tank, thereby helping to prevent 'pitching-over' the expansion tank.

This will greatly reduce the amount of fresh water being induced into the system and so reduce corrosion of the internal system ferrous parts.

Taking more advantage of excessive solar heating water

